



## Ultra-Oil Mop® Instructions

Part# 3300

### **Assembly:**

Remove the mop and handle from the storage bin and affix the handle to the Ultra-Oil Mop by screwing the two pieces together finger tight, no tools needed. The Ultra-Oil Mop is now ready for use.

### **Sorbent Pads:**

The Sorbent Pads are designed to soak up 25 times their weight in oil and other petroleum products. For minor clean-up, where the Sorbent Pads do not become saturated, they may be used multiple times before changing. The Ultra-Oil Mop Tray is designed to drain and contain the Ultra-Oil Mop between uses, as well as to store the mop when not in use.

### **Replacing Pads:**

To remove a saturated Sorbent Pad, pull the pad straight up from the base of the Ultra-Oil Mop along one side. Fold the soiled pad under onto itself and remove the other side from the base of the mop. Discard the soiled pad in a container approved for oil-soaked materials. To apply a clean Sorbent Pad, simply tuck the pad in along one side using a blunt edge or your finger tips. Bring the pad around the bottom of the Ultra-Oil Mop, pull gently to tighten and tuck in the remaining side.

To order additional Ultra-Fuel Mops or replacement Sorbent Pads, call your distributor, or visit us on the web at: [www.SpillContainment.com](http://www.SpillContainment.com)

